

REAR WINDSHIELD - CFMOTO U10 PRO

50-55337KIT

SEIZMIK®

HIGHLIFTER

SEIZMIK™

FALCON RIDGE

SNORKEL YOUR ATV

SYSTEM 3
OFF-ROAD
Traction. Strength. Style.

EPI
PERFORMANCE

 service@seizmik.com

 1-866-838-3366
between 9:00AM and 5:00PM EST.



www.seizmik.com/customer-support

Parts Available For These Popular Brands and Others

POLARIS

can-am



HONDA

Kawasaki

 **YAMAHA**

Seizmik® is the leader in designing and manufacturing Windshields, Mirrors, Cab Systems, Racks, and other premium accessories engineered to maximize your vehicle's performance and versatility.



Familiarize yourself with all the steps before beginning installation.

KIT CONTENTS


ITEM	PART #	Description	QTY
	50-55337	U10 Pro Rear Windshield Panel	1
	54-90069-F	U10 Pro Rear Windshield Gasket, 148 inch	1
	54-10052	CFMOTO Profit Clamp Assembly	2
	54-90135	Nylon-Insert Locknut, M6 x 1mm	4
	54-90148	Lower Bracket	2
	54-90145	Screw, M8 x 35mm	4
	54-96418	Screw, M6-1 x 20MM	4
	54-96497	M8 Spacer	4

WINDSHIELD INSTALLATION INSTRUCTIONS




1. Peel plastic film 4" back on all sides of the panel. Remove after rear panel is fully installed.





2. Install the gasket around the full perimeter of the windshield.
 - It does not matter about the orientation on the polycarbonate, but when complete the bulb side will be the inside of the windshield.
 - Trim access to gasket if needed.

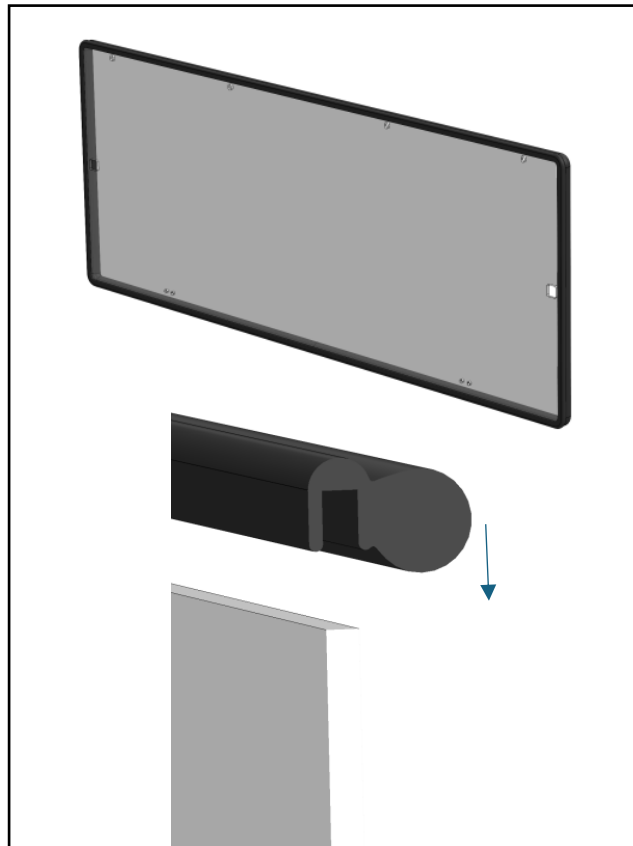


3. Install the lower brackets. Make sure the bracket is installed on the windshield side with the gasket bulb.
- Align the lower brackets to the bottom slotted holes.
 - Secure the bracket with the M6 Screw and M6 nut(s) provided.
 - Place the windshield within the profile of the rear opening, with the lower clamps going over the cross support.

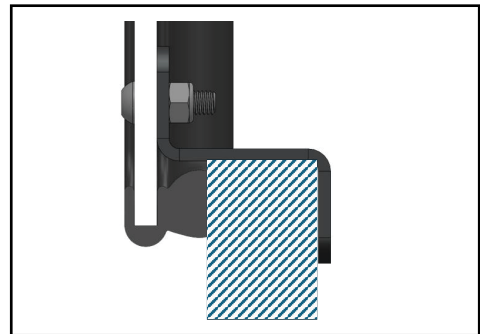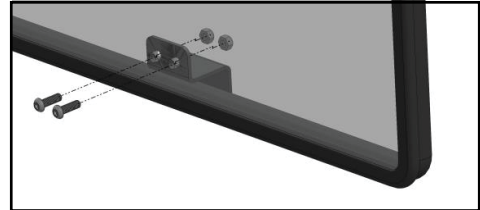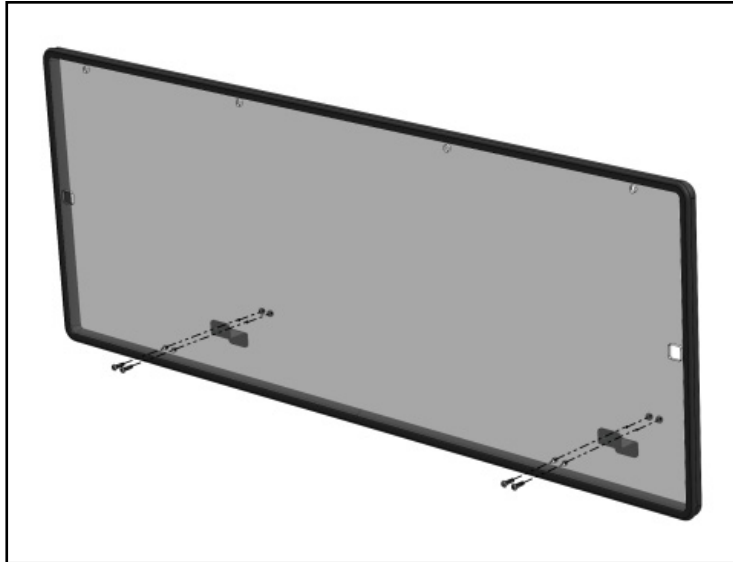

4. With the windshield inside the profile of the machine work from one end to the other by inserting 1 - M8x35mm screw into each slot at the top.
- Place 1- M8 Spacer over the screw on the inside of the windshield.
 - Align screw with nut(s) at the top cross support and loosely tighten screw.
 - Once all screws are loosely installed, go back and snug the screws up.

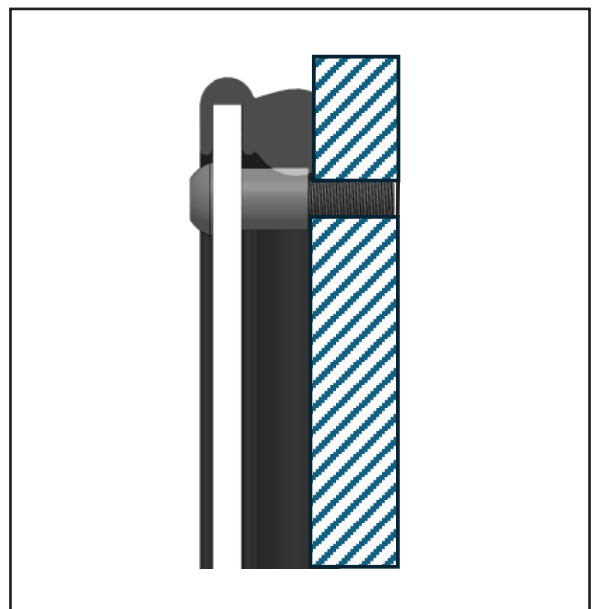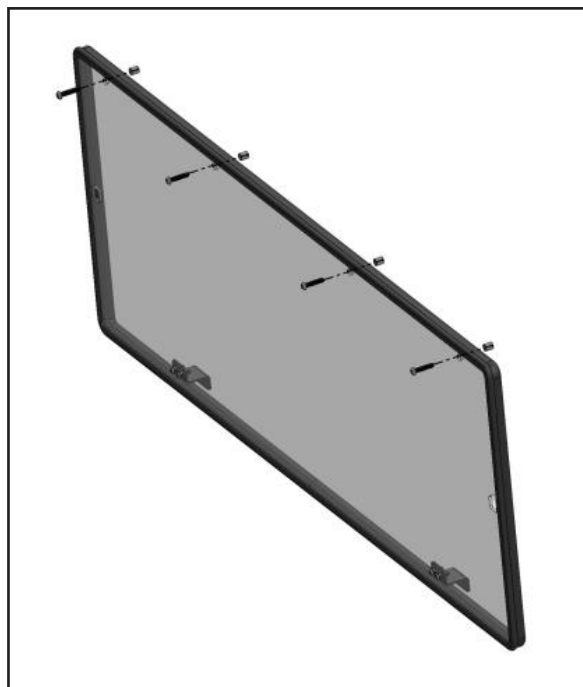

5. Install the Side Clamps. NOTE: Gasket hidden for easier visibility.
- Insert the SZ Cover through the square cut out from the outside of the windshield.
 - Install the clamp by sliding the 2 post into the cut outs on the cover.
 - Pull clamp until the post clicks into place.
 - Rotate the clamp around the C-Pillar until it securely snaps into place.

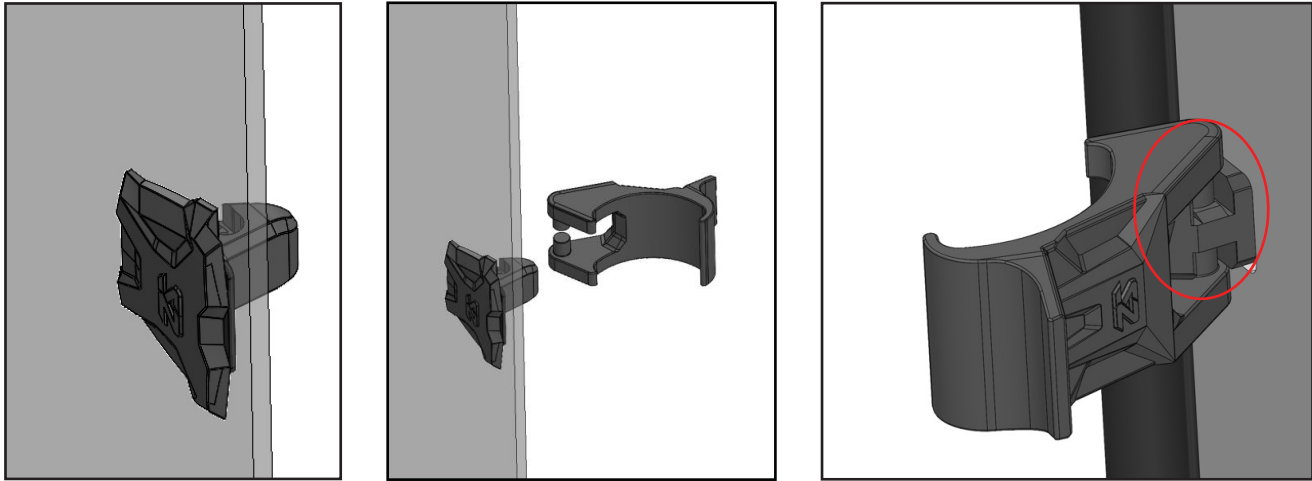

6. Snug up all hardware once the windshield is centered.



INSTALLATION COMPLETE

1-YEAR WARRANTY

Your purchase is protected by a 1-year warranty against manufacturer defects and workmanship issues.

Need help, missing a part, or have a question? Visit www.seizmik.com/customer-support or email us at service@seizmik.com— we're here to help!