


56-18032KIT & 56-18033 INSTALLATION INSTRUCTIONS


PARTS LIST

- A** - HALO-RA LED MIRROR ASSEMBLY
- B** - HALO RA-CAST MIRROR ASSEMBLY
- C** - CFMOTO UFORCE CLAMP
- D** - M8X20MM BOLT


A - 56-18032

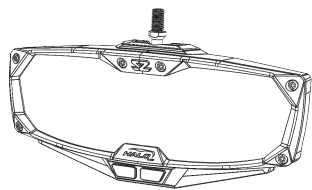


C - 56-31419

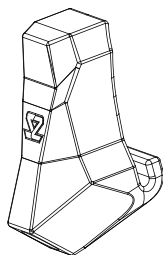

B - 56-18033

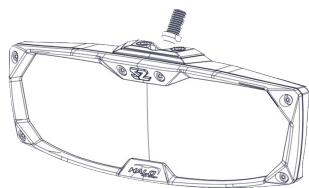


D - M8 X 14MM

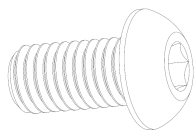

Tools needed: 5mm Allen Wrench
10mm Compression Wrench


STEP 1

Use these bolts to adjust tension on the ball joint. A clockwise turn will increase tension, a counter-clockwise turn will decrease tension.

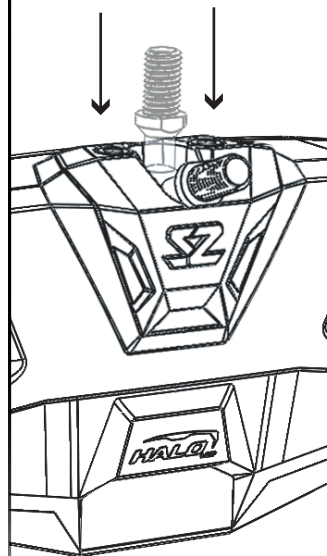


STEP 2

If your machine come with pre drilled holes in the header panel, use that hole for mounting.

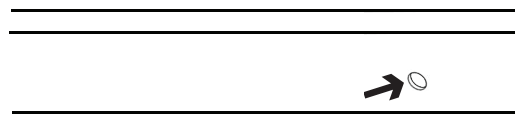


If your machine does not have a pre drilled hole, fit the bracket in a location you wish to install your mirror and then mark the location and drill a 3/8" hole.

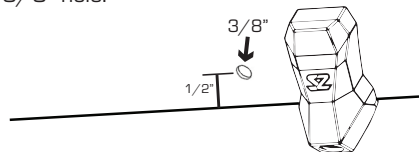

STEP 3


Now thread the Mirror Assembly into the CFMOTO UForce Clamp.

Use a 10mm Combination wrench to tighten ball stud if needed.

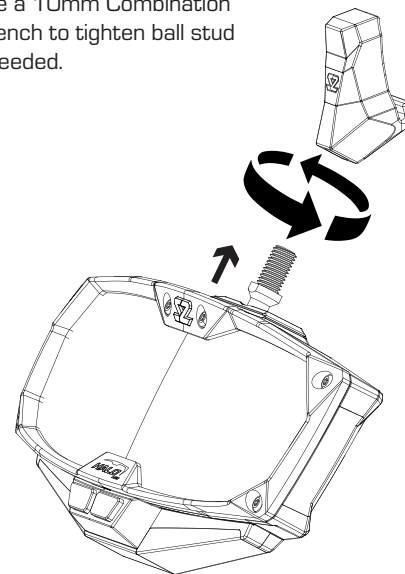

STEP 4

You can now install the CFMOTO Uforce Clamp with the Mirror Assembly onto the header panel using the supplied M8x20mm bolt. Tighten by hand, no need to over tighten

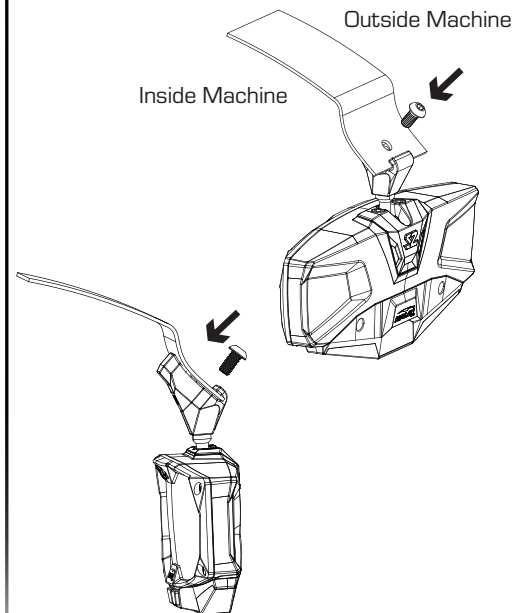

STEP 5

If you purchased the mirror with LED lights (56-18032) you can scan the QR code below for additional instructions.



If you have any questions, comments, need assistance, or are missing parts, please visit our website: www.seizmik.com/customer-support Or email us at: service@seizmik.com.

Visit www.seizmik.com for more information on our products or call 1-866-838-3366 between 9:00AM and 5:00PM EST