



**Instructions for Installation Polaris Ranger Full Size Crew (2014-18) Soft Door Kit  
(PO-14RANGERCREW-SDK0)**

**Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.**

Be sure to read these instructions thoroughly before opening and installing the enclosure. The installation is best done when the temperature is 70 degrees F. or warmer. The temperature affects the adhesive Velcro, if conditions prevent installing in warmer weather it helps to store the adhesive Velcro at room temperature prior to installation.

1. Carefully open the carton and remove the rolled up Cab Enclosure on a large flat surface that is clean and free of dirt or other material that may soil or scratch the windows of the Cab.
2. Check over the parts included in the carton with the parts list shown below:

<b><u>2" Adhesive Velcro Qty</u></b>	<b><u>Length</u></b>
2 each	5" long
2 each	20" long
2 each	32" long
2 each	60" long


<b><u>1" Adhesive Velcro Qty</u></b>	<b><u>Length</u></b>
2 each	30" long

<b>Snap studs</b>	27 each (1 extra)
<b>Door Panels</b>	2 each

3. Begin by cleaning the roll cage and plastic that surrounds the doors. Using rubbing alcohol is preferable. This step is very important for the Velcro strips to properly adhere.
4. Now start installation by placing the 2" adhesive Velcro strips around the outside edges of the upper door frame. Starting at the front of the frame first place the 32" strip as shown in the photo on the next page.



5. Next place the 60" strip as shown below.

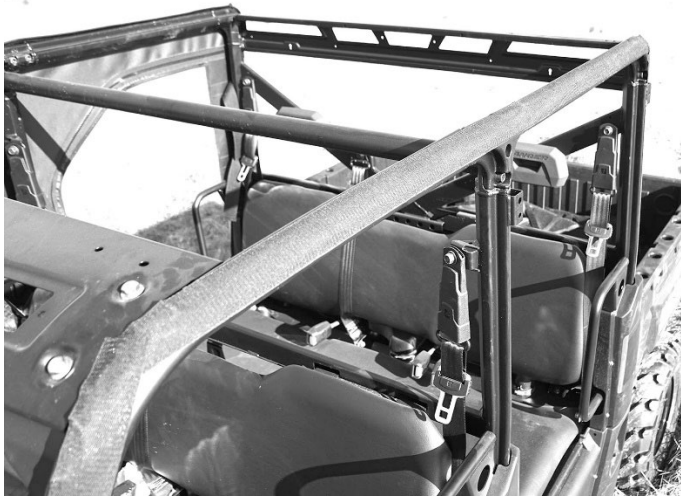

6. It is ok to allow the two strips to overlap like in the photo below.



7. Next place another 5" strip in the rear corner as shown below.



8. Next place the 20" strip down the back of the cage as shown in the photo below.




9. Now move to the front bottom edge of the door frame and install the 1” adhesive strip as shown in the photo on the next page.



10. Last step is to install all of the snaps along the bottom of the doors. It works best to put the screw studs into the snap sockets on the door first. Then one by one pull the door in place and push the screw into the plastic making sure to

put enough pressure to leave a mark. Then remove the screw stud from the door and install it where the mark was left behind at. The following pictures show where all the snaps should be placed.



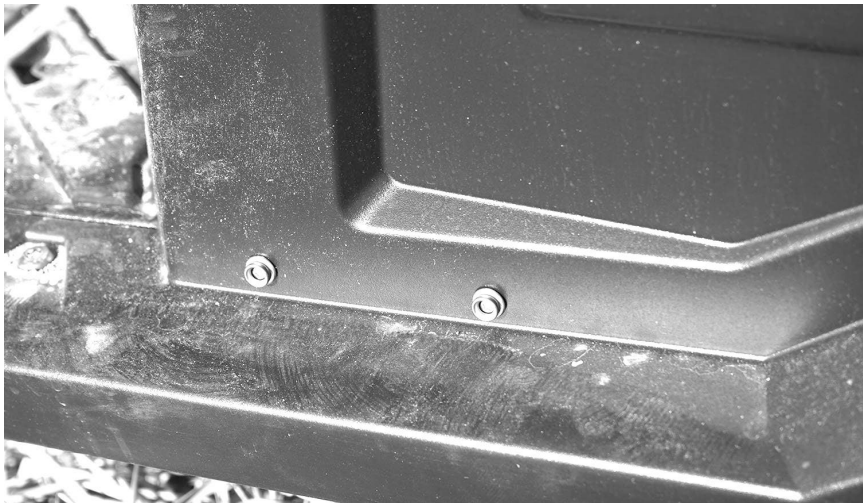

11. Now your enclosure should be complete. With proper care your cab should last for years to come. Enjoy!!!

### **Cleaning and Storage Recommendations:**

1. Before removing the Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.
2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was when it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.

If you have any questions, comments, need assistance, or are missing parts, please contact us by one of the methods below.

 [service@seizmik.com](mailto:service@seizmik.com)

 **1-866-838-3366**  
between 9:00AM and 5:00PM EST.



[www.seizmik.com/customer-support](http://www.seizmik.com/customer-support)



**WARNING:** This product contains a chemical known to the State of California to cause cancer. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).