

58-62975 - Bed Winch Rack
CFMOTO U10 PRO

SEIZMIK®

✉ service@seizmik.com

☎ 800-699-0947 | 8:00am - 5:00pm EST



www.seizmik.com/customer-support

Parts Available For These Popular Brands and Others

POLARIS

can-am



HONDA

Kawasaki

 **YAMAHA**

PRODUCT INFORMATION

Seizmik®, the leader in manufacturing Windshields, Mirrors, Door Kits, Racks, and other great accessories to help you do what you do, better.

Familiarize yourself with all the steps before beginning assembly.

If you have any questions, comments, need assistance, or are missing parts, please visit our website <http://seizmik.com/customer-support> Or email us at service@seizmik.com. Visit www.seizmik.com for more information on our product or call 1-866-838-3366 between 9:00AM and 5:00PM EST.


Tools Required:

- 4 mm Allen Key
- 6 mm Allen Key
- 13mm Socket / Wrench
- Adjustable Wrench
- Phillips head screw driver
- Zip-Ties
- Scissors
- Safety Glasses
- Gloves

INCLUDED INSIDE THE BOX:

Item	Item Description	QTY	Item	Item Description	QTY
A	FAIR LEAD	1	I	FAIR LEAD BOLT SOCKET HEAD SCREW M8 -1.25 x 18 mm	2
B	SHROUD	1	J	WINCH MOUNTING PLATE	1
C	BED PLATE PASSENGER	1	K	M8-1.25 Nylon-Insert Flange Locknut	7
D	BED PLATE DRIVER	1	L	M8 Stainless Steel Washer	2
E	CFMOTO BED ANCHOR	6	M	M8 x 1.25 mm x 20 mm FL HD	6
F	MAIN WINCH BAR	1	N	Loop Clamp	1
G	M8 -1.25 x 20 mm Hex Drive Flat Head Screw	7	O	1500# WINCH (separate box)	1
H	WINCH MOUNTING BOLT M8 -1.25 x 18 mm	2			

58-62974 - PARTS DIAGRAM

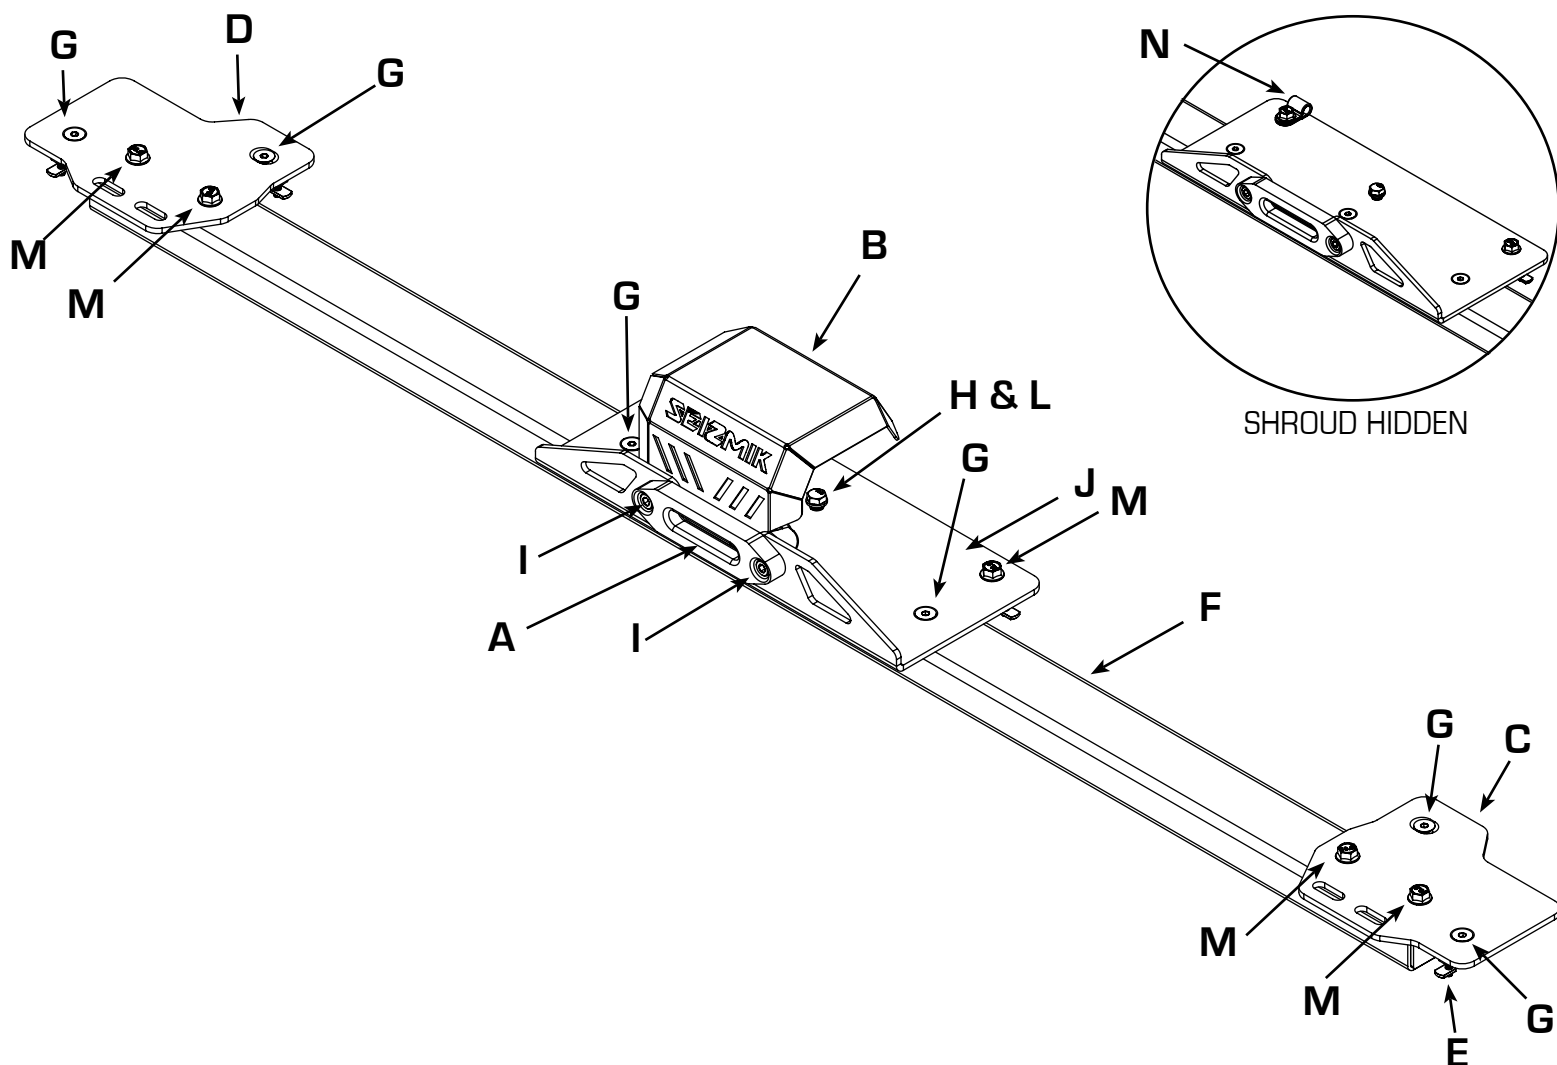



(84-11421) 1500# WINCH - PARTS DIAGRAM



ASSEMBLY INSTRUCTIONS FOR BED WINCH RACK

STEP 1: Make sure the machine is on a flat and level surface prior to installation.


- Install the CFMoto Bed Anchors into the bed pockets as shown.
- Drop anchors in and turn with a 4mm allen wrench until anchors are tight and locked.

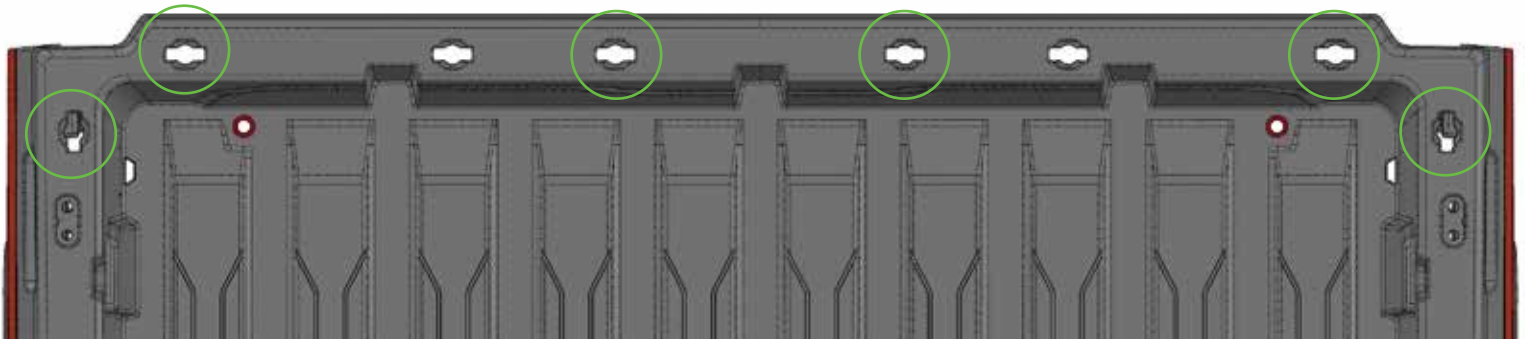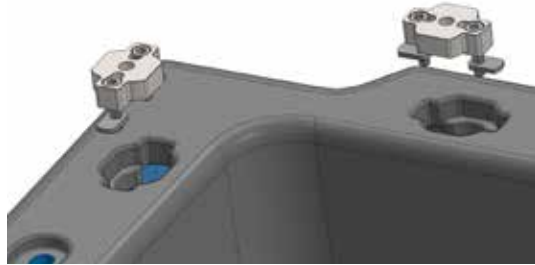

STEP 2: Install the BED PLATE PASSENGER and BED PLATE DRIVER to the MAIN WINCH BAR using the provided M8 - 1.25 mm x 20 mm bolts.




STEP 3: Secure the bar to the bed using 4 of the M8 -1.25 x 20 mm Hex Drive Flat Head Screws in location shown.

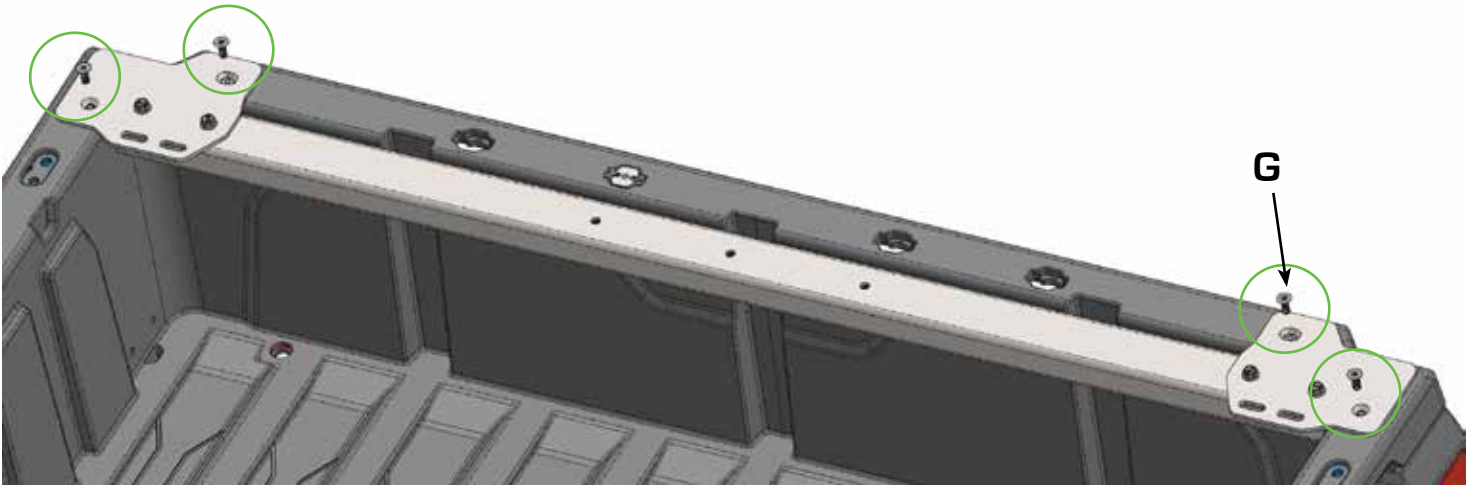


STEP 4:

- Mount the Winch Mounting Plate to the center of the bar.
- Mount the Winch Motor onto the frame by using the Winch Mounting Bolt M8 -1.25 x 18 mm that came with your winch kit package.

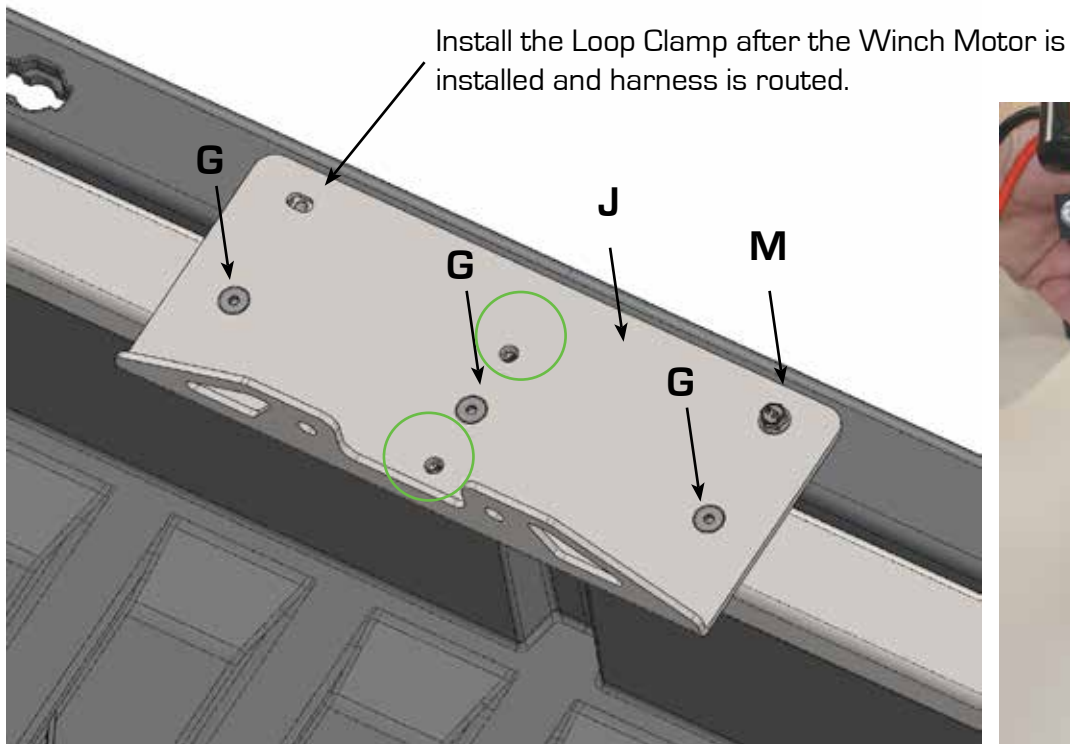

STEP 4

- Make sure the Shroud is over the winch motor prior to installing the Fair lead.
- Install the Fair lead to the Winch Mounting Plate frame using the Fair Lead Bolt Socket Head Screw M8 -1.25 x 18 mm.
- Then install the Winch Hook and Strap included in your kit.

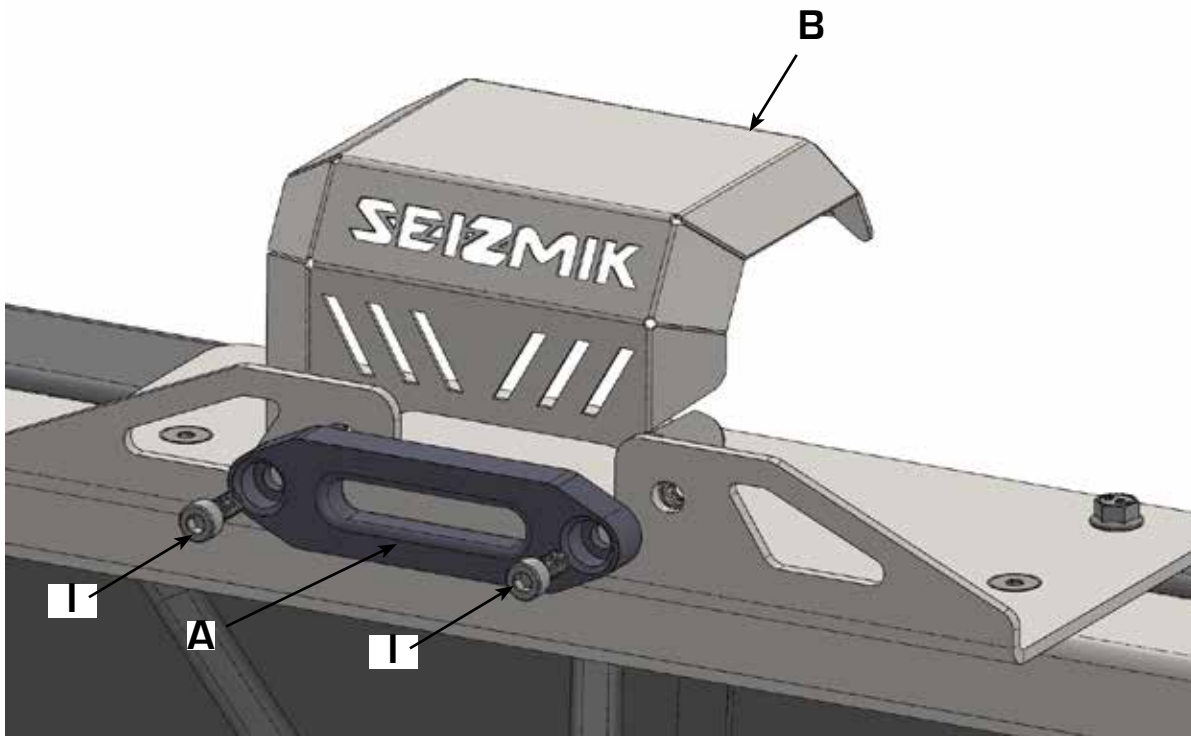

WIRING THE WINCH TO THE MACHINE

STEP 5 - Running the Wire Harness

- Now that the Winch is mounted and in place, you can run the electrical harness.
- Remove the center back seat cushion.



STEP 6

- From inside the machine, take the harness and push the connector shown through the hole behind the driver side seat on the back wall of the machine.



STEP 7

- Connect the positive (red wire +) and negative (black wire -) leads as shown, any remaining slack pull to the rear of the machine from the outside.



STEP 8

- Route the wire cleanly to avoid any potential pinch points and securely zip tie as needed. Images shown are a suggested path. Route underneath the bed to avoid any pinching while open and lowering the bed.



Running the wire up towards the mounted Winch Motor.



STEP 9

- Once the end of the wire is routed up near the winch motor, its time to install the control box.


Locate tab on the bottom of the controller and slide the tabs under the metal strap and tighten the metal strap to secure.



Control box positive (red)
connection terminal

Control box negative (black)
connection terminal

- To connect power, plug the end of the wire harness to the connector on the winch motor control box.

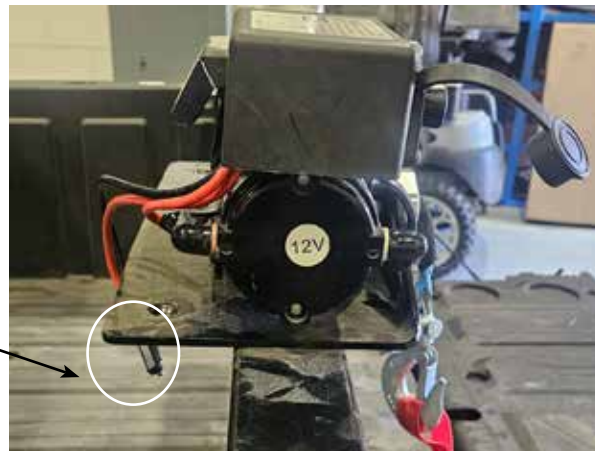

- Connect remote to the round plug on the control panel when in use. Keep dust cover on when remote is not in use.



INSTALLATION COMPLETE

WARRANTY INFORMATION

Seizmik warrants to the original retail purchaser that the Seizmik product is free from non-conformities in material and workmanship as follows:

- All Seizmik Mirrors: unlimited lifetime of the product
- Steel Fabricated Parts: lifetime of the product
- Soft Goods: 1 year from date of purchase
- Windshields / Plastic Items: 1 year from date of purchase

LIMITATIONS OF WARRANTY / IMPLIED WARRANTIES:

Seizmik's sole obligation under this warranty is to repair or replace the defective product, at Seizmik's option. The duration of any implied warranty or condition of merchantability, fitness for a particular purpose, or otherwise, on this product shall be limited to the duration of the express warranty set forth above. In no event shall Seizmik be liable for any loss, inconvenience, or damage, whether direct, incidental, consequential, or otherwise resulting from breach of any express or implied warranty or condition, of merchantability, fitness for a particular purpose, or otherwise with respect to this product except as set forth herein. All limitations of this implied warranty are subject to the laws of the state or country in which you reside. To obtain service under this warranty, please contact the retailer where you purchased your Seizmik product, or call Seizmik Customer Service Department at 888-838-3366, or by email at service@seizmik.com.

WARRANTY EXPLANATION:

This warranty in no way replaces or constitutes an extension of the complete UTV or vehicles manufacturer's warranty. Retailers and wholesale outlets for Seizmik products are not authorized to modify this warranty in any way. It is the consumer's responsibility to regularly examine the product to determine the need for normal service or replacement. This warranty does not cover the following:

- Seizmik products which have been modified, neglected or poorly maintained, misused or abused or involved in accidents.
- Damage occurring during shipment of the products (such claims must be presented directly to the carrier).
- Damage to products resulting from improper assembly or repair of the UTV or vehicle.
- Damage or deterioration to the surface finishes aesthetics or appearance of the product.
- The labor required to remove, re-fit, or re-adjust the product.
- Normal wear to the product including using the product through very rough terrain.

WARRANTY POLICY DETAIL:

All warranty return claims must be authorized by Seizmik Customer Service and assigned a Return Merchandise Authorization (RMA) number. The RMA number must be clearly displayed on the package, or it will not be processed.

All parts not listed in the RMA will be returned to shipper. All warranty return claims must be accompanied by original purchase receipt. All warranty return claims must be sent to Seizmik for verification before a replacement or credit will be issued. Customer/Dealer is responsible for associated costs of shipping warranty/return items back to Seizmik. Seizmik will ship back warranty items to the retailer using the same shipping level and carrier as the item was shipped to Seizmik. Warranty claims submitted over 1-year post purchase will be subject to shipping and handling fees.

All order or shipping discrepancies must be reported by phone/fax/email within 5 working days of receipt of the order. No return will be accepted after 30 days from the date of the RMA number being issued.

To return any merchandise for Warranty Service, refunds or exchanges, a Return Merchandise Authorization (RMA) number must be obtained. Call 888-838-3366 x 112 for an RMA number or expedite the process by filling out the form online on our Customer Support Page.

- Name, Shipping Address, and Phone Number
- Part # of Product
- Sales Receipt # / Proof of Purchase
- Date of Purchase
- Nature of Problem